

Způsob zvedání													
		Počet ramen	1	1	2	2	2	2	3+4	3+4	2	3+4	
Úhel sklonu		0°	90°	0°	90°	0°-45°	45°-60°	0°-45°	45°-60°	asymm	asymm		
Code	Závit [mm]	Točivý moment [Nm]	Mezní pracovní zatížení (G) [kg]										
<input type="radio"/> PLZW-FIX-SP 0,4T	M8	10	800	400	1600	800	560	400	840	600	400	400	
<input type="radio"/> PLZW 0,4 t	M8	10	800	400	1600	800	560	400	840	600	400	400	
<input type="radio"/> PLZW-FIX-SP 0,63T	M10	10	1100	630	2200	1260	890	630	1330	940	630	630	
<input type="radio"/> PLZW 0,63 t	M10	10	1100	630	2200	1260	890	630	1330	940	630	630	
<input type="radio"/> PLZW-FIX-SP 0,95T-L	M12	15	1100	950	2200	1900	1340	950	2010	1420	950	950	
<input type="radio"/> PLZW 0,95 t-L	M12	15	1100	950	2200	1900	1340	950	2010	1420	950	950	
<input type="radio"/> PLZW-FIX-SP 1,3T M14 PC/O	M14	30	2900	1300	5800	2600	1830	1300	2750	1950	1300	1300	
<input type="radio"/> PLZW 1,3 t	M14	30	2900	1300	5800	2600	1830	1300	2750	1950	1300	1300	
<input type="radio"/> PLZW-FIX-SP 1,8T M16 PC/O	M16	50	2900	1800	5800	5800	2540	1800	3810	2700	1800	1800	
<input checked="" type="radio"/> PLZW 1,8 t	M16	50	2900	1800	5800	3600	2540	1800	3810	2700	1800	1800	
<input type="radio"/> PLZW 1,8 t	M16	50	2900	1800	5800	3600	2540	1800	3810	2700	1800	1800	
<input type="radio"/> PLZW-FIX-SP 2,2T M18 PC/O	M18	70	2900	2200	5800	4400	3110	2200	4660	3300	2200	2200	
<input type="radio"/> PLZW 2,2 t	M18	70	2900	2200	5800	4400	3110	2200	4660	3300	2200	2200	
<input type="radio"/> PLZW-FIX-SP 2,5T M20 PC/O	M20	100	2900	2500	5800	5000	3530	2500	5300	3750	2500	2500	
<input type="radio"/> PLZW 2,5 t	M20	100	2900	2500	5800	5000	3530	2500	5300	3750	2500	2500	

<input type="radio"/>	PLZW-FIX-SP 3,7T M22	M22	120	6500	3700	13000	7400	5230	3700	7840	5550	3700	3700
<input type="radio"/>	PLZW 3,7 t	M22	120	6500	3700	13000	7400	5230	3700	7840	5550	3700	3700
	PLZW-FIX-SP 4T M24 PC/O	M24	160	6500	4000	13000	13000	5650	4000	8480	6000	4000	4000
<input type="radio"/>	PLZW 4 t	M24	160	6500	4000	13000	8000	5650	4000	8480	6000	4000	4000
<input type="radio"/>	PLZW-FIX-SP 5,4T M27 PC/O	M27	200	6500	5400	13000	10800	7600	5400	11400	8100	5400	5400
<input type="radio"/>	PLZW-FIX 5,4T L=MAX M27 PC/O	M27	200	6500	5400	13000	10800	7600	5400	11400	8100	5400	5400
<input type="radio"/>	PLZW-FIX 6,3T	M30	250	6500	6300	13000	12600	8900	6300	13360	9450	6300	6300
	PLZW-FIX-SP 6,3T	M30	250	6500	6300	13000	12600	8900	6300	13300	9400	6300	6300
<input type="radio"/>	PLZW-FIX 8t	M33	270	15000	8000	30000	16000	11300	8000	16900	12000	8000	8000
<input type="radio"/>	PLZW-FIX-SP 8T M33 PC/O	M33	270	15000	8000	30000	16000	11300	8000	16900	12000	8000	8000
<input type="radio"/>	PLZW-FIX 8T L=MAX M33 PC/O	M33	270	15000	8000	30000	16000	11300	8000	16900	12000	8000	8000
<input type="radio"/>	PLZW-FIX 10T	M36	320	15000	10000	30000	20000	14100	10000	21200	15000	10000	10000
<input type="radio"/>	PLZW-FIX-SP 10T	M36	320	15000	10000	30000	20000	14100	10000	21200	15000	10000	10000
<input type="radio"/>	PLZW-FIX 13T	M42	400	15000	13000	30000	26000	18300	13000	27500	19500	13000	13000
<input type="radio"/>	PLZW-FIX-SP 13T	M42	400	15000	13000	30000	26000	18300	13000	27500	19500	13000	13000
<input type="radio"/>	PLZW-FIX 13T L=MAX M42 PC/O	M42	400	15000	13000	30000	26000	18300	13000	27500	19500	13000	13000
<input type="radio"/>	PLZW-FIX 15T	M48	600	15000	15000	30000	30000	21200	15000	31800	22500	15000	15000
<input type="radio"/>	PLZW-FIX-SP 15T	M48	600	15000	15000	30000	30000	21200	15000	31800	22500	15000	15000
<input type="radio"/>	PLZW-FIX 15T L=MAX M48 PC/O	M48	600	15000	15000	30000	30000	21200	15000	31800	22500	15000	15000